

Frame Kit Installation Instructions


Retractable Pleated Insect Screen



Read Installation Instructions carefully before proceeding Ensure that Installation Instructions remain with homeowner.




Recommended Tools

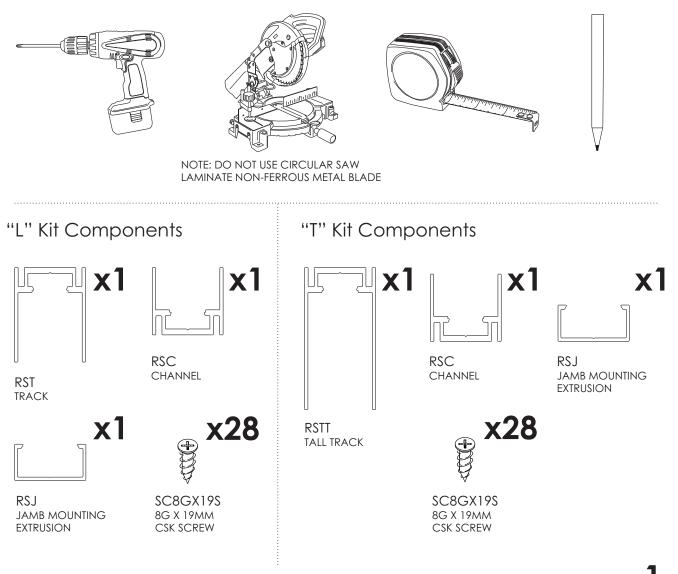


Cutting RST or RSTT and RSC


All dimensions are in inches (mm)

Measure the internal frame opening width (W). Note: Jamb may be rebated (example shown below) Depending on the size of the frame RST or RSTT and RSC can be supplied in 2 lengths)

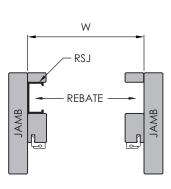


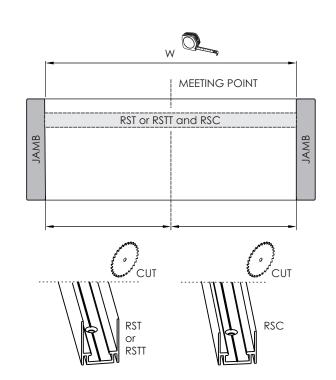


Cutting RSJ | single or double screen

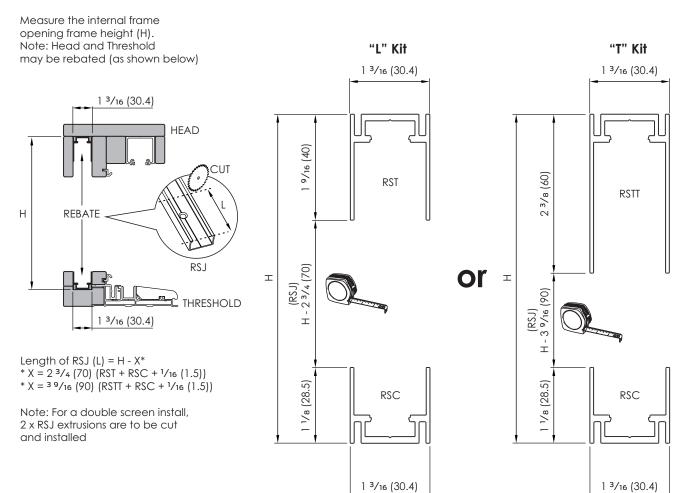


Cutting RSJ | corner double screen

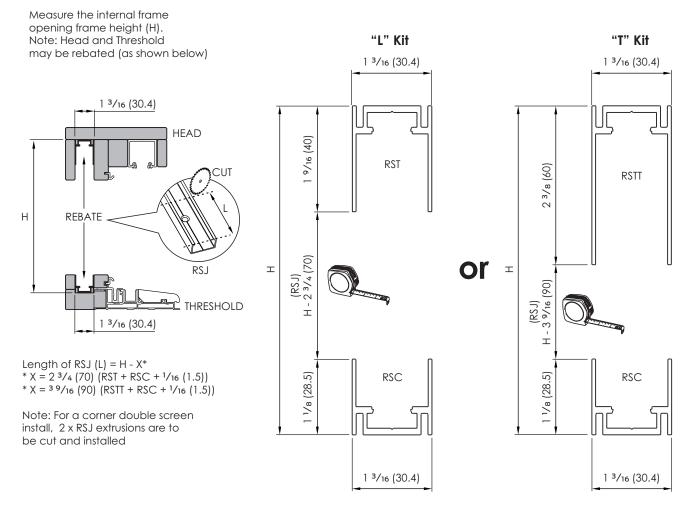

Cutting RST or RSTT and RSC | open joint

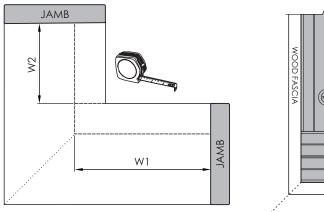


Length of RSC (W2) / RST or RSTT (W2) = W2 and Length of RSC (W1) / RST or RSTT (W1) = W1

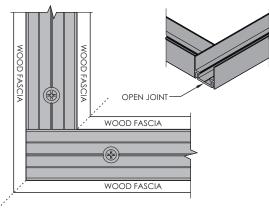


Fitting Frame | single screen

RSC, RSTT and RSJ have been supplied pre-drilled. Place profiles into position and screw fix using screws (SC8GX19S)

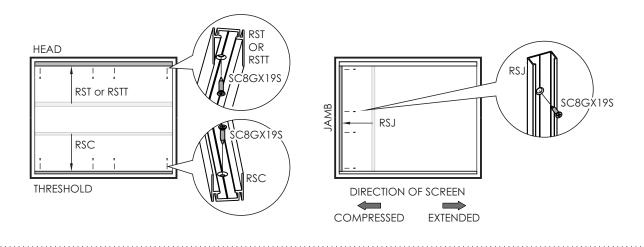

Fitting Frame | double screen

RSC, RSTT and RSJ have been supplied pre-drilled. Place profiles into position and screw fix using screws (SC8GX19S)

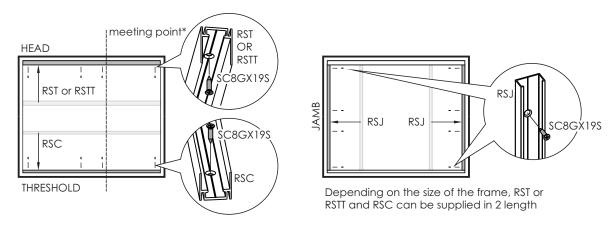

Fitting Frame | corner double screen

RSC, RSTT and RSJ have been supplied pre-drilled. Place profiles into position and screw fix using screws (SC8GX19S)

